



MASSAGE CHAIR WITH LIFT

Owner's Manual LVA2O17

WHAT'S IN THE PACKAGE

- 1x Recliner Frame
- 1x Backrest
- 1x Massage Remote
- 1x Recline/Lift Remote
- 1x Massage Power Adapter
- 1x Transformer
- 1x Wall Power Cord
- 1x Power Extension Cord



PRODUCT OVERVIEW

Your Vive Massage and Power Lift Recliner provides heat and massage functions for ultimate relaxation as well as power recline and lift functions for users with restricted or limited mobility.

We are constantly answering questions and recording helpful videos to make using your Massage and Power Lift Recliner as easy as possible. Throughout the manual we will include QR codes and links to important videos that you can visit to help you.



To see all of the FAQs in one place visit **vhealth.link/1in**

ASSEMBLY INSTRUCTIONS



For a video demonstration, check out **vhealth.link/neq**

- 1. Position the Recliner Frame on the floor where the Recliner is to be assembled. It should be on a flat surface and within reach of two (2) power outlets.
- 2. Attach the Backrest to the Recliner Frame by lining up the metal grooves on the Backrest with the brackets on the inside of the Frame. Make sure that the Backrest slides completely down over the brackets.



3. Peel up the flap on the back of the Frame to access the control wires.



4. Locate two (2) white wires, and connect them together. This connects the electronics for the Backrest and the Frame so that they work together.



5. Locate the large black wire on the Frame, and attach the Recline/Lift Remote to it to connect the Recliner controls.



6. Locate the small black wire on the base of the Frame, and connect the Recliner Transformer wire to it. Insert the Recliner Power Cord into the port on the Transformer, and plug the other end into a power outlet.

- 9. Close the flap on the back of the Frame, making sure to smooth out the fabric fastener strip at the bottom.

7. Insert Massage Po the correspondi the back of the F other end into a

8. Connect the Ma

back of the Frame.

the large black cable on the

MASSAGE CONTROLS

To use the massage features of the Recliner, simply sit down and press the POWER button. The POWER light will illuminate, and the Recliner will begin a basic massage program for fifteen (15) minutes before turning itself off.

However, the Recliner has many massage features available, and all of them can be easily controlled using the Massage Remote.



COMPONENT	DESCRIPTION		
POWER button/ indicator	Turns the Massage Recliner on at LOW intensity in NORMAL mode across all body zones with the heat on. The massage function will run continuously for fifteen (15) minutes before automatically turning off. To resume operation, just press this button again. Press this button again to turn all massage features off.		
INT button/ HIGH and LOW indicators	Switches between the Recliner's two (2) intensity levels (high and low) when pressed.		

COMPONENT	DESCRIPTION		
MODE button and indicators	Switches between the Recliner's five (5) operating modes when pressed: NORMAL mode: a firm, vibrating massage AUTO mode: a random pulsing massage for all zones WAVE mode: a gradual, side-to-side vibrating massage PRESS mode: a rapid, tapping massage PULSE mode: a deep, tapping massage		
Zone buttons and indicators	Each of the red buttons turns the massage feature on and off for the named zone (BACK, LUMBAR, and THIGHS). The indicators will illuminate to show which zones are on.		

RECLINE/LIFT CONTROLS

Your Recliner also has power recline and lift functions for those with limited mobility.



COMPONENT	DESCRIPTION	
Recline button	Press and hold this button to recline the back and raise the footrest. Release the button at any time to freeze the Recliner where it is.	
Lift button	Switches between the Recliner's two (2) intensity levels (high and low) when pressed.	
Power Indicator Light	Turns on whenever either the [Recline] or [Lift] buttons are pressed to show that power is being supplied to that function.	

MAINTENANCE

The only maintenance required for your Massage and Power Lift Recliner is to clean it occasionally with a damp sponge using a mild detergent. Make sure to unplug both the massage and power lift features from the power source before cleaning. Pat it dry with a clean, dry cloth, and do not reconnect to a power supply or use the chair until the fabric is completely dry. Do not use any abrasive or volatile cleaners, brushes, gasoline, glass furniture polish, paint thinner, or water hotter than 120°F.

TROUBLESHOOTING

This section includes some common problems and fixes for your Massage and Power Lift Recliner. If it isn't operating like you think it should, check here before contacting **service@vivehealth.com**.

SYMPTOM	PROBLEM	CAUSE	REMEDY
Massage feature will not start.	No Power	Power Adapter installed incorrectly	Securely insert the Power Adapter into the adapter port on the back of the Backrest and wall socket.
Massage feature turns off unexpectedly.	Loss of power	Power Adapter installed incorrectly	Securely insert the Power Adapter into the adapter port on the back of the Backrest and wall socket.
		Autotimer turned the Massager off after fifteen (15) minutes	Press the POWER button to start it back up again. Do not operate for more than thirty (30) minutes per session.
Massage feature is not working for THIGH zone. (located in the seat).	No power to lower massagers	Power Adapter installed incorrectly	Check the red and white wire connections on the back of the Frame to make sure they are secure. These wires connect the massage power and controls to the lower massagers.
Recliner will not recline or lift.	No Power	Power Adapter installed incorrectly	Check all of the connections between the Recliner power cable, the Transformer, and the Power Cord to make sure they're securely attached.
	No Power	Recline/Lift Remote installed incorrectly	Check the connection between the Recline/Lift Remote and the Recliner to make sure it's securely attached.

ADDITIONAL INFORMATION AND SAFETY WARNINGS

- Sit down on the Recliner gently, rather than dropping down into it. Never sit on the armrests either. Failure to follow these warnings can tip the Recliner and cause harm or damage.
- Unplug the Recliner when not in use and while cleaning. Do not operate the Recliner if any of the cords or cables are damaged, frayed, or exposed.
- The footrest is not a seat and is not designed to support a person's full weight. Even children should never sit on it when open.
- This device is intended for adult indoor use only. Children should only use it in the presence of direct adult supervision. Do not use outdoors.
- Be aware of the presence of children and pets when reclining or lifting the Recliner so that they do not get caught in the moving hinges and supports. Do not allow them to play on or around the Recliner when it is in a reclined position.
- Only one (1) adult should use the Recliner at a time; it is not intended for multiple persons. The weight limit for the Recliner is 300 lb.
- Do not use the Recliner if you have severe heart problems, high blood pressure, or cerebral thrombosis, if you have weak bones or are in a wasted state, or if you are pregnant without first consulting your doctor.
- Individuals with pacemakers should not use the Recliner.
- If you experience muscle or joint pain during or after using the Recliner, discontinue use and consult your physician. Persistent pain could be a symptom of a more serious condition.
- Do not use the Recliner in areas of excessive heat or humidity. Keep away from direct heat sources or air conditioning units as this can damage the fabric.

TECHNICAL SPECIFICATIONS

- Rated Voltage: 110V
- Rated Frequency: 6OHz
- Overall Height: 38"
- Total Length (Unreclined): 35.5"
- Total Length (Reclined): 63"
- Total Width (Outside Armrest to Outside Armrest): 26"
- Seat Width: 18"
- Seat Depth: 20.5"
- Seat Height: 17.75"
- Weight: 88lbs
- Materials: 90% poly 10% nylon

WARNING: No modification of this equipment from its original specifications is allowed.

WARRANTY INFORMATION



1 YEAR GUARANTEE

You are protected by Vive Health's industry leading guarantee and customer service.

GOT MORE QUESTIONS?

Our customer service team would love to help! Feel free to contact us.

- (734) 975 6668
- (734) 975 6678
- www.healthcaredme.com
- 🖻 info@healthcaredme.com



HEALTHCARE DME

2911 Carpenter Rd, Ann Arbor MI 48108